

# INSTRUCTION MANUAL

## CERAMIC FAN HEATER



**MODEL: \*\*\*\*\*(PTC-910)**

**EAN: \*\*\*\*\***

### INDOOR HOUSEHOLD USE ONLY

**Please save and read this instruction manual carefully before use.**

## **INSTRUCTION**

Thank you for purchasing our Ceramic Fan Heater. Each unit has been manufactured to ensure safety, reliability, and ease to use. Before use, please read these instructions carefully and keep for further reference.

### **IMPORTANT SAFEGUARDS**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- WARNING: In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

### **CONTROL PANEL**

<b>SYMBOL</b>	<b>FUNCTION</b>
"ON/OFF"	ON/OFF
"OSC"	Switch for Oscillation function
"750W"	Power Switch

### **SPECIFICATION**

Heat Setting: 750/1500W

Voltage: 120V 60Hz

Power: 1500W

## **INSTRUCTION FOR USE**

To use the machine for heating:

- Plug the heater into a suitable power outlet, observing all the instruction regarding positioning and turn on the switch at the back of the heater.
- Push "ON/OFF" button, the heater will running automatically with Fan only;
- Push "OSC" button, the heater will start to swing;
- There are 2 "750W" button, push one for warm (750W), push two for hot (1500W)

### **SAFETY TIP-OVER SWITCH:**

The appliance is fitted with a tip-over switch. When you use the appliance in an upright position on a flat and stable surface, the tip-over switch will be on. In the event the heater is knocked over, the heater will stop functioning automatically.

### **OVERHEATING:**

- The thermostat will turn the machine off it overheats.
- Overheating can be caused by obstruction to the air intakes on the back of the machine or the grill on the front. If this occurs please disconnect the machine and allow it to cool for 30 minutes. Remove any obstruction and turn the machine back on.
- If the heater ceases to function, the most likely cause is a blown fuse. Simply replace the 13amp fuse in the plug and reconnect. If there is still no function please follow the repair advice above.

### **CLEANING AND MAINTANCE:**

- There are no parts inside the machine that require your attention or servicing. Do not try to open the outer case. By doing so you could damage the motor and heating element and invalidate the warranty. If you have a problem with the heater, or if the power cord gets damaged in any way, you MUST take the unit to a suitably qualified engineer or electrical repair centre.
- Before cleaning the machine, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never cleaning the machine, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never clean the machine with water and do not let it get wet under any circumstance.
- The outside case and be cleaned using a slightly damp lint-free cloth [a small amount of detergent can be used if required].
- To remove any dust particles etc. form inside the front grill, or the rear air intakes, you can use a regular vacuum cleaner.
- Always make sure the machine is completely dry before using.
- If you are not going to use the heater for a while it is best to make sure it is clean and dry and then store it inside a plastic bag in a cool dry place.
- With sensible care and attention this heater will give you many years of good service and economical heating.