

CERAMIC FAN HEATER



PTC-901A

120V~60Hz 1500W

USER INSTRUCTIONS

Please read the instruction carefully before using and keep it properly.

Warning: Never cover the heater and avoid being scalded by it.

Operating instructions for model number: PTC-901A

Thank you for buying this ceramic fan heater. Please read these instructions carefully and keep them in a safe place for future reference.

When switched on for the first time a slight odor might be emitted for a few minutes. This is harmless and occurs with most heaters when any slight traces of dust or lubricants that may have collected in the factory are heated away.

PRECAUTIONS:

- PLEASE do not place this heater where children, the infirm or pets can reach it.
- The front grid gets very hot when in use, so treat this heater as you would an electric bar fire.
- Do not cover the heater when in use and make sure that there is at least 12 inches of clearance behind it so that the air intakes are not obstructed.
- Never use the heater near a bath, shower or swimming pool.
- Ensure that no object of any kind is within two meters of the heater when it is use.
- Never use the heater near any inflammable material. It must not be put near or in contact with any FUEL, OIL, GAS or EXPLOSIVES.
- Do not use it outdoors.
- Do not position it directly below a power socket.
- Always position it on a flat horizontal surface.
- NEVER move or pick up the heater when it is turned on.
- Do not use the heater with a programmer or timing device that switches it on automatically. The use of such devices is dangerous and can cause a fire risk .

SYMBOL	FUNCTION
“0”	OFF
“  ”	Fan only, no heat
“I”	Low heat output
“II”	Full heat output

Press the oscillation switch at the button of the heater and the body can oscillate in the range of 90 degrees when rotating. To start oscillation, flick the switch to “I” .To stop Oscillation , flick the switch to “0”

THERMOSTAT:

Turn clockwise to increase the heat output.

OPERATION:

- Plug the heater into a suitable power outlet [observing all the instruction regarding positioning and switch on.

To use the fan only function:

- Turn the control dial to “☼”. The fan will blow out air at room temperature.
- If the fan does not operate, the ambient room temperature is cooler than the built-in thermostat “OFF” level. Turn the thermostat dial gradually clockwise and the fan will start blowing.
- As soon as the fan starts, the light in the front of the machine will illuminate.

To use the machine for heating:

- Turn the control dial to “I” for low heat and “II” for full heat.
- Set the level of heat by turning the thermostat dial gradually clockwise for the lowest heat and fully clockwise for maximum.
- The thermostat will turn the machine off when the selected room heating is achieved, and when the temperature drops it will turn on again automatically.
- For maximum heat output use “II” with the thermostat turned fully clockwise.
- To distribute heat evenly around a room, press the oscillation switch at the button of the heater “I”

OVERHEATING:

- The thermostat will turn the machine off if it overheats.
- Overheating can be caused by obstruction to the air intakes on the back of the machine or the grill on the front. If this occurs please disconnect the machine and allow it to cool for 30 minutes. Remove any obstruction and turn the machine back on.
- If the heater ceases to function, the most likely cause is a blown fuse. Simply replace the 13amp fuse in the plug and reconnect. If there is still no function please follow the repair advice above.

CLEANING AND CARE:

- There are no parts inside the machine that require your attention or servicing. Do not try to open the outer case. By doing so you could damage the motor and heating element and invalidate the warranty. If you have a problem with the heater, or if the power cord gets damaged in any way, you MUST take the unit to a suitably qualified engineer or electrical repair centre.
- Before cleaning the machine, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never cleaning the machine, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never clean the machine with water and do not let it get wet under any circumstance.
- The outside case can be cleaned using a slightly damp lint-free cloth [a small amount of detergent can be used if required].
- To remove any dust particles etc. from inside the front grill, or the rear air intakes, you can use a regular vacuum cleaner.
- Always make sure the machine is completely dry before using.
- If you are not going to use the heater for a while it is best to make sure it is clean and dry and then store it inside a plastic bag in a cool dry place.
- With sensible care and attention this heater will give you many years of good service and economical heating.